



The light can be working after linking with the remote controller.

Linking Instructions



⚠ If the light not blink slowly, the linking failed. Pls switch off the light again, and follow the above steps again.

Unlinking Instructions



⚠ If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

The link and unlink instruction apply to below remote

